

Vento Solare Crew Training

How to Use & Control the B&G Instruments

Topics Covered

- Introduction
- Display Operation
 - B&G Triton 2 & H5000 Graphic Displays
- Spray Hood Layout & Default Settings
- Mast Display Layout & Default Settings
- B&G H5000 Pilot Controller on Spray Hood
- Start Timer on H5000 Graphic Display
- Ping Line on H5000 Graphic Display
- Man Overboard (MOB)
- Navigation Terms for Reference

Introduction

- The B&G system has sensors (compass, roll, pitch, speed paddlewheel, depth transducer, wind direction / speed sensor, and the external GPS)
- The sensors are connected to the B&G H5000 Hercules Server - calibrated using the networked Laptop with corrections applied to use the best data possible
- The H5000 Server integrates data, performs calculations & corrections, and distributes data to the displays and other systems e.g. Autopilot, Chart Plotter, VHF Radio, WiFi Router, Computer, Remote Tablet or Phone
- The B&G displays are the primary method to display relevant sensor data used by the helmsman and crew
 - Important crew functions are start timer & start line ping
 - Crew may be asked to select available displays
- This presentation provides an overview of the displays, how we use them, and how they are adjusted

Display Operation

B&G Triton 2 & H5000 Graphic Displays


- Page Key:



- Press to scroll through the enabled data pages
- Press and hold to display a list of enabled pages from where you can select directly the page to display
- Menu and dialog operation: Press to return to previous menu level or to exit a dialog.




- Arrow Keys

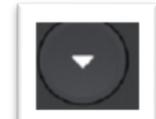


- Press to move up and down in menus and dialogs.
- Press to adjust a value.

- Enter Key

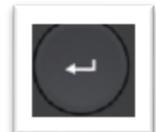

- Press to select a menu option and enter the next menu level.
- Press to activate/deactivate a menu/dialog option.

- Menu / Backlight Key

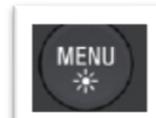

- Press once to display the page menu.
- Double-press to display the Settings menu.
- Press and hold to show the Display setup dialog.

Triton 2 Display



H5000 Graphic Display



Spray Hood Layout & Default Settings



- **Left Display**

- Tide Magnitude & Direction
- Boat Speed, Heading & Depth

- **Center**

- Pre-Start: Start line and Race Timer (Crew will control pre-start)
- After Start: Laylines, Waypoint Information, Performance Targets

- **Right Display**

- Wind Strip Chart (True Wind Direction & Speed)

The Center Display will be used by Tactician after start

Mast Display Layout & Default Settings

- Upper Display
 - Speed through Water (Paddlewheel) & Magnetic Heading (Compass)
 - Speed Over Ground & Course Over Ground Magnetic (GPS)
- Middle Display
 - Apparent Wind Angle / True Wind Angle
 - Apparent Wind Speed / True Wind Speed
- Lower Display
 - Waypoint Bearing / True Wind Direction
 - Waypoint Distance / Boat Heel Angle



Mast displays are typically not changed – only backlight is remotely controlled

H5000 Pilot Controller on Spray Hood

The H5000 Pilot Controller is operated by 8 keys to control the autopilot and adjust autopilot parameters.

- **MODE** Changes the autopilot mode / Scrolls up in menu options / Increases values. With active autopilot: Toggles between Wind mode and Auto mode
- **10° COURSE CONTROL STARBOARD (10° RIGHT)** Changes target course 10° Starboard
- **1° COURSE CONTROL STARBOARD (1° RIGHT)** Changes target course 1° Starboard / Activates Non Follow Up (NFU) mode when in Standby mode / Enter menu
- **10° COURSE CONTROL PORT (10° LEFT)** Changes target course 10° Port
- **1° COURSE CONTROL PORT (1° LEFT)** Changes target course 1° Port / Activates Non Follow Up (NFU) mode when in Standby mode / Exit menu
- **STBY** Disengages the autopilot
- **AUTO** Engages the autopilot
- **MENU** Enter the **Main menu** / Scrolls down in the menu options / Decreases values. Press and hold for 3 secs enters the lighting settings.



The H500 Pilot Controller is only used for short handed racing and delivery

Start Timer on H5000 Graphic Display

- Press **Page Key** until Start Line Screen is Displayed
 - Default Timer should be 5:00 minutes
- Press **Menu** to display the menu
- Press **Enter Key** to select Race Timer
- Press **Enter Key** to start the timer – timer starts
- Press **Page Key** to return to Start Line Display



If Resync at 4 minutes needed Press **Menu**


- Press **Enter Key** to select Race Timer
- Press **Down Arrow** to highlight Sync
- At 4 minute signal press **Enter Key** to synchronize timer
- Press **Page Key** to return to Start Line Display



All Crew Members Should Know This

Ping Line on H5000 Graphic Display


- Press **Page Key** until Start Line Screen is Displayed
- Press **Menu** to display the menu
- Press **Down Arrow** to highlight Ping
- Press **Enter Key** select Ping
- Press **Arrow Keys** to highlight Port or Starboard end
- Press **Enter Key** when foredeck calls bow crossing line
- Repeat steps for opposite end of line
- Press **Page Key** to return to Start Line Display

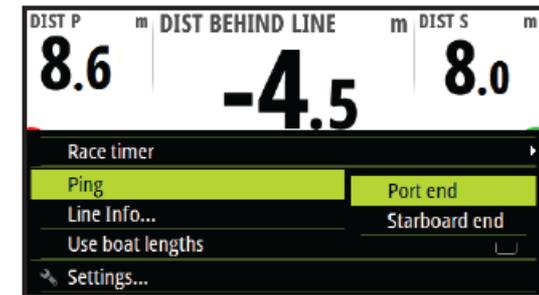

All Crew Members Should Know This

Man Overboard (MOB)

- Man Overboard (MOB) buttons located port & starboard side outboard helm
 - Press either one if a person goes overboard
 - H5000 Graphic Display on Spray Hood Automatically switches to MOB mode

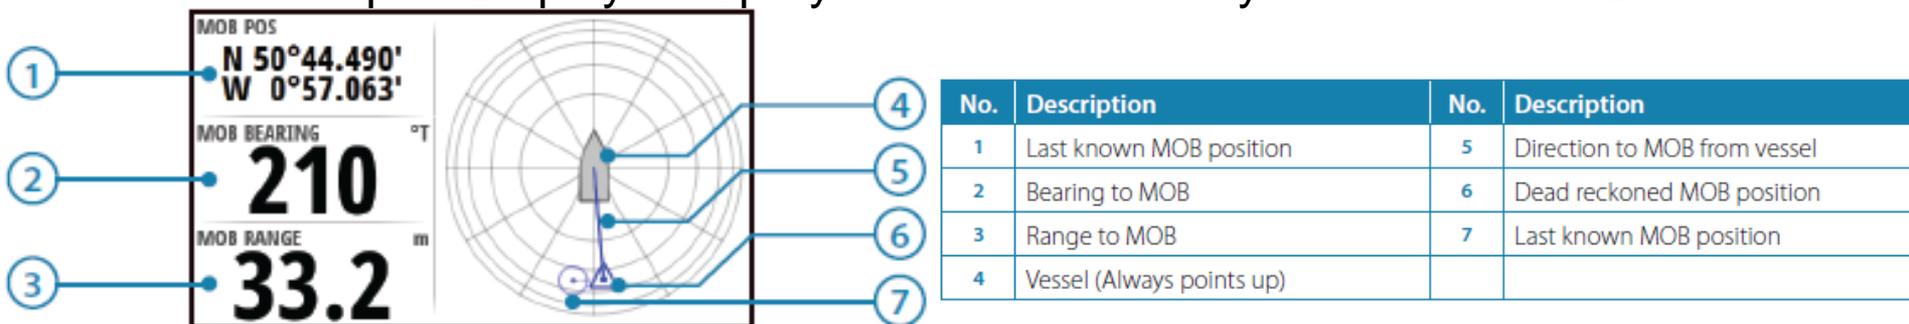

- A waypoint becomes active at the MOB activation position indicated with a circular symbol. If the man over board event is activated via an AIS-SART then this position will update via the AIS-SART signal.
- The GPS longitude and latitude co-ordinates of the last known position are displayed with the bearing and range to MOB waypoint listed below
- The H5000 CPU performs dead reckoning calculations to provide the estimated position of the man over board displayed as a triangle symbol.
- To cancel the MOB event on the H5000 Graphic Display press **MENU** and select cancel

All Crew Members Should Know This

Navigation Terms for Reference

Navigation terms

